

FRONT OVER FENDER REMOVAL/INSTALLATION

id091000878700

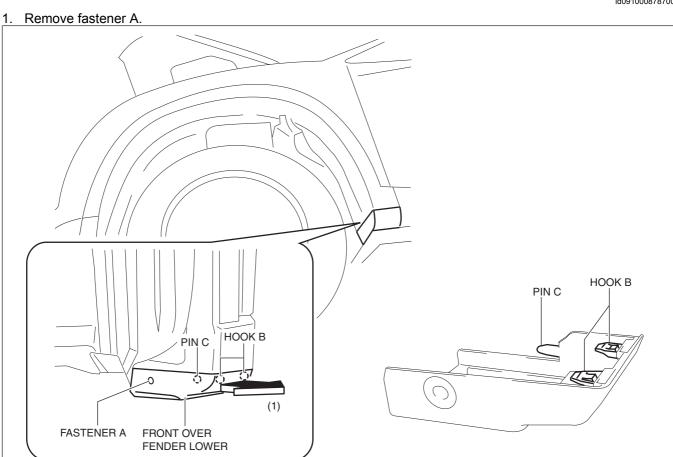


ac5jjw00000888

- Pull the front over fender lower in the direction of the arrow (1) while removing hook B and pin C.
 Remove fasteners D.

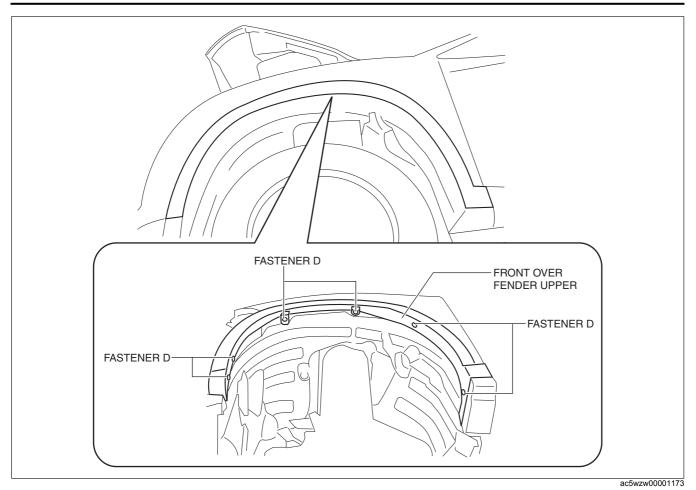

4. Pull the front over fender upper in the direction of the arrow (2) while removing clips E, F and G.

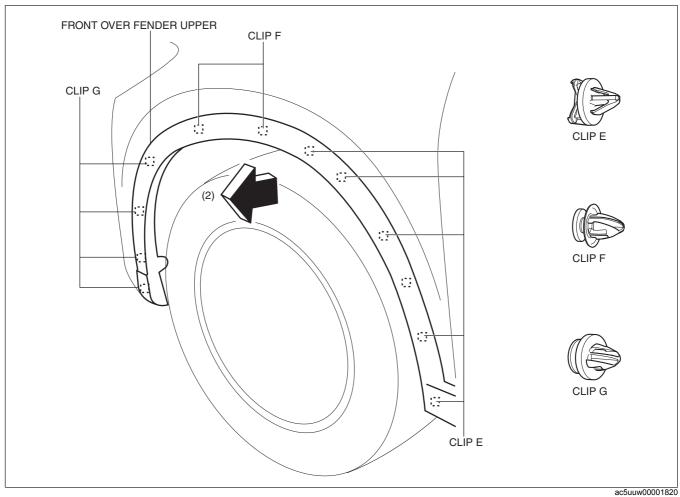

5. Install in the reverse order of removal.

Warning

 When installing the front over fender, verify that clips E, F, G are not damaged, if they are damaged, replace them with new ones. Otherwise, the front over fender may fall off while the vehicle is being driven, leading to a serious accident.