
GLASS PANEL REMOVAL/INSTALLATION


id091500800500

ac5wzw00001506

- 1. Fully open the sunshade.
- 2. Fully close the glass panel.
- 3. Remove screws.

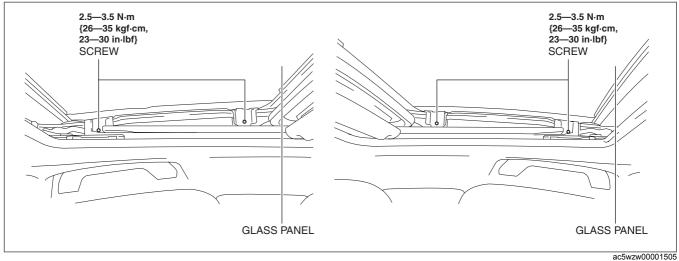

4. Remove the glass panel in the direction of the arrow in the order of (1), (2), (3) shown in the figure.

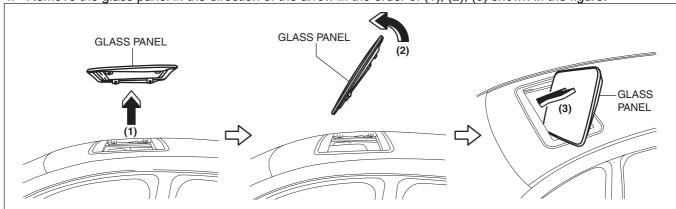

5. Peel the weatherstrip off the glass panel. (See Weatherstrip Installation Note.)

6. Install in the reverse order of removal.

Weatherstrip Installation Note

• When installing the weatherstrip to the glass panel, align the joint line to the position shown in the figure.

