
## **COWL GRILLE REMOVAL/INSTALLATION**


id091600801000

1. Remove the windshield wiper arm and blade. (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)

2. Pull the front fender molding in the direction of the arrow (1) while detaching hook A.

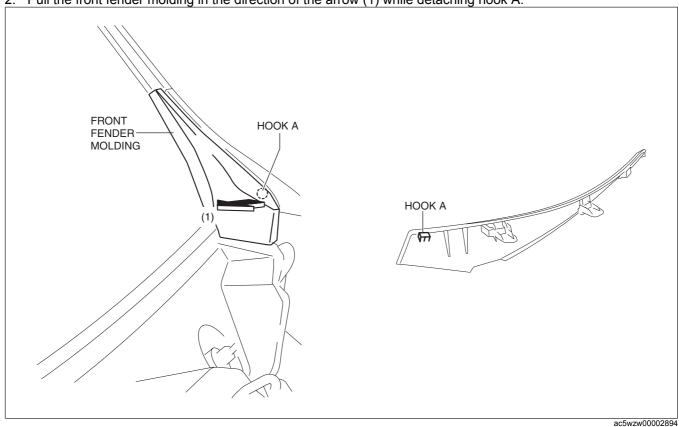


3. Pull the front fender molding in the direction of the arrow (2) while detaching hook B.

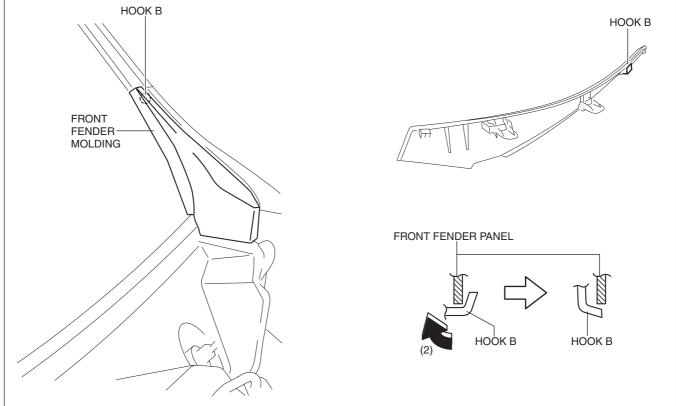


4. Pull the front fender molding in the direction of the arrow (3) and remove it while detaching tab C.


ac5wzw00002895

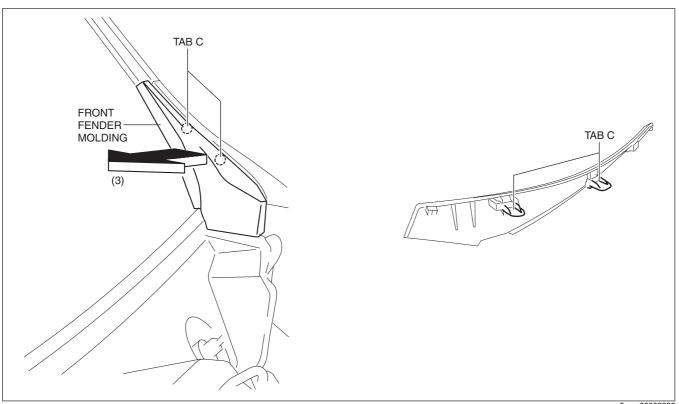

ac5wzw00002896

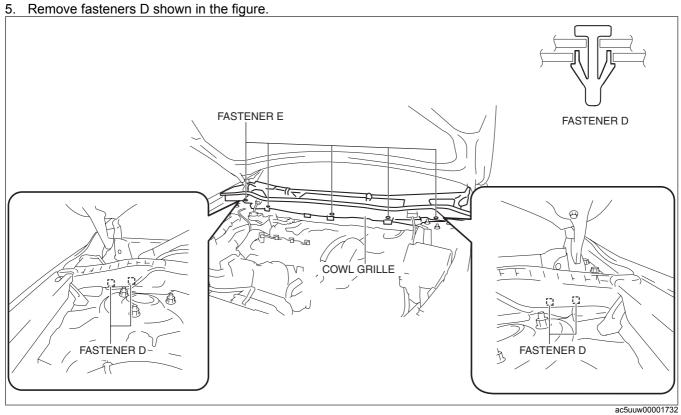

- 6. Remove fasteners E shown in the figure.
- Disconnect the join pipe A of the windshield washer hose. (See WINDSHIELD WASHER HOSE REMOVAL/ INSTALLATION.)
- 8. Pull the cowl grille in the direction of the arrow in the order of (4), (5), (6), (7), (8) and remove it while detaching tabs F, tabs G.

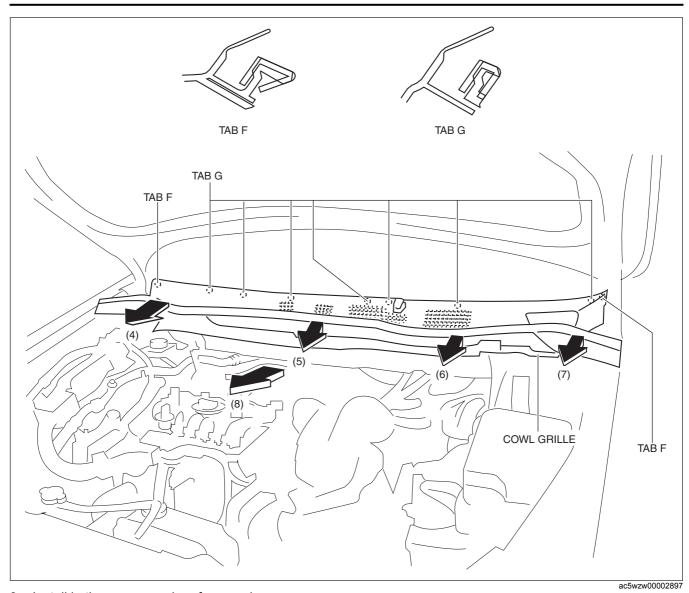

9. Install in the reverse order of removal.