SPLASH SHIELD REMOVAL/INSTALLATION


id091600808400

Front

- Front splash shield No.1

 1. Set the mudguard aside. (See MUDGUARD REMOVAL/INSTALLATION.)

 2. Remove fasteners A.

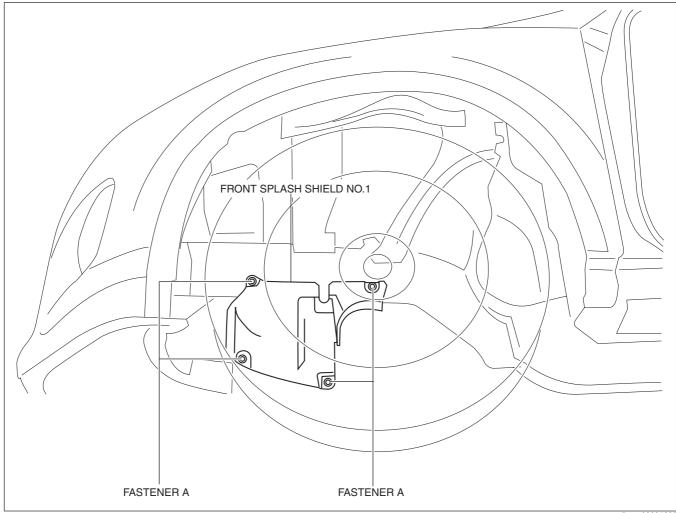


ac5wzw00001286

- 3. Remove the front splash shield No.1.
- 4. Install in the reverse order of removal.

Front splash shield No.2

1. Remove fasteners B.

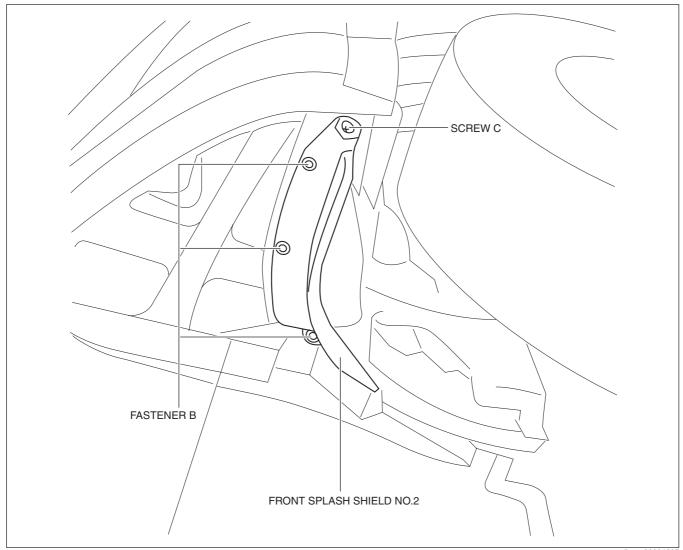


ac5wzw00001287

- 2. Remove screw C.
- 3. Remove the front splash shield No.2.4. Install in the reverse order of removal.

Rear splash shield

- 1. Set the rear over fender aside. (See REAR OVER FENDER REMOVAL/INSTALLATION.)
- 2. Remove fasteners D.

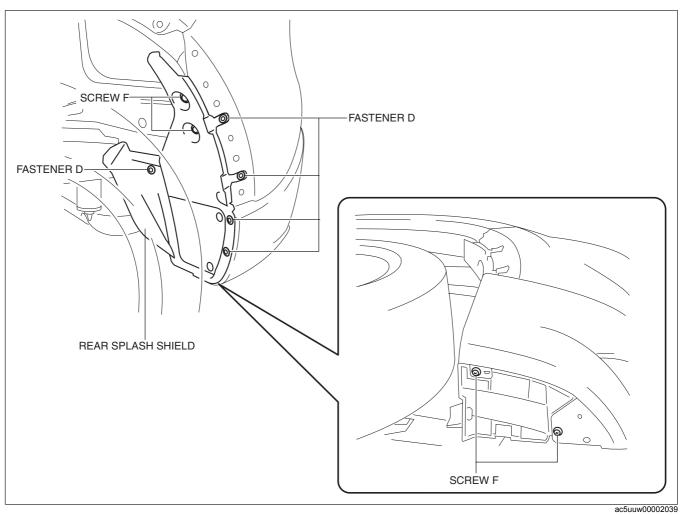

- Remove screws F.
 Remove the rear splash shield.
 Install in the reverse order of removal.