REAR SASH MOLDING REMOVAL


id091600805100

Warning


- Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.
- 1. Remove the rear door garnish. (rear side) (See REAR DOOR GARNISH REMOVAL/INSTALLATION.)
- 2. Remove the double-sided adhesive tape in the position shown in the figure using the utility knife.


Caution

• When remove the double-sided adhesive tape, be careful not to damage clip A.

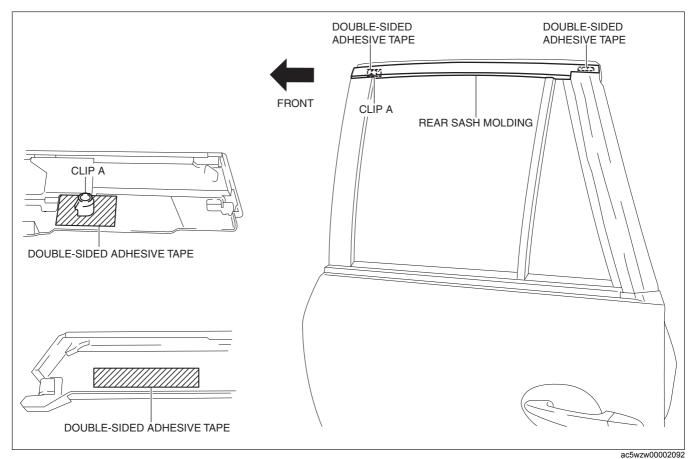

3. Insert a tape-wrapped flathead screwdriver shown in the figure and remove the protector in the direction of arrow (1).

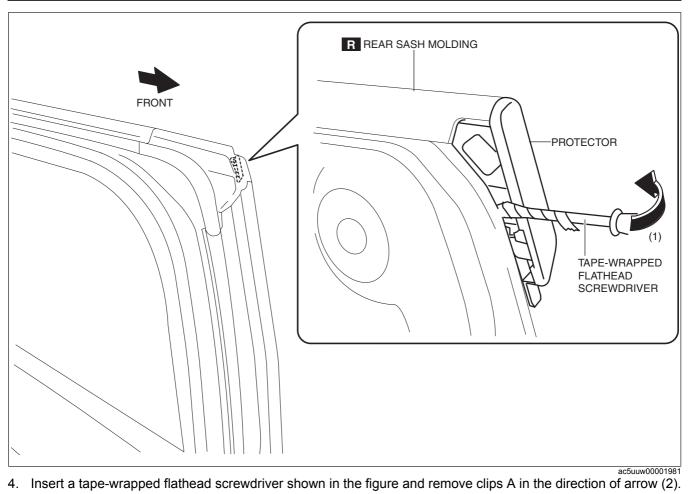

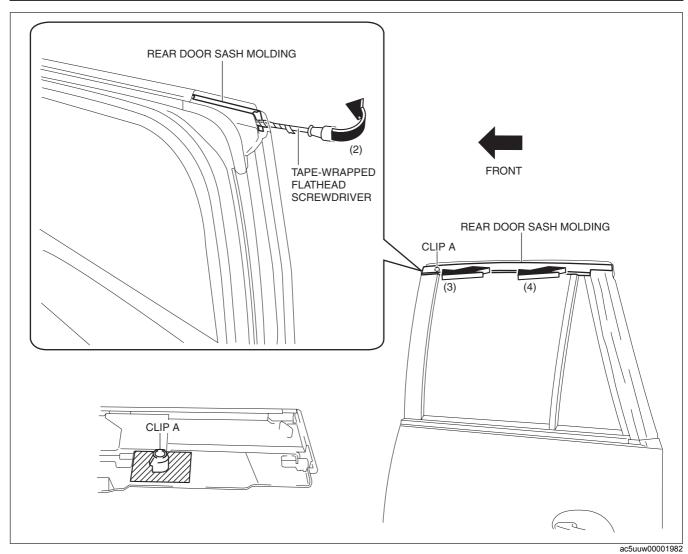

5. Remove the rear sash molding in the direction of arrow in the order of (3), (4) shown in the figure.