
## SIDE STEP MOLDING REMOVAL/INSTALLATION

id091600801800

- 1. Set the rear over fender aside. (See REAR OVER FENDER REMOVAL/INSTALLATION.)
- 2. Insert a tape-wrapped flathead screwdriver shown in the figure and remove the clip A in the direction of arrow (1)

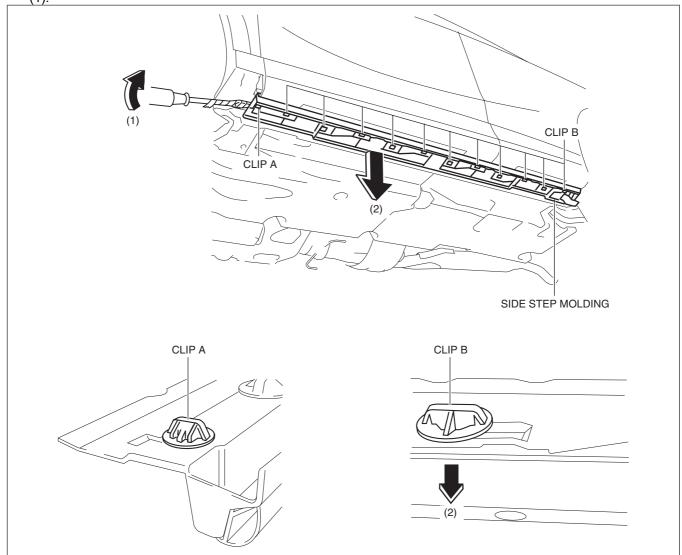

ac5wzw00003104

- 3. Pull the side step molding in the direction of the arrow (2) shown in the figure and remove clips B from side step molding.
- 4. After removing the side step molding, remove clip A, clips B from the body using a fastener remover.
- 5. Install clip A, clips B to the side step molding.
- 6. Install in the reverse order of removal.